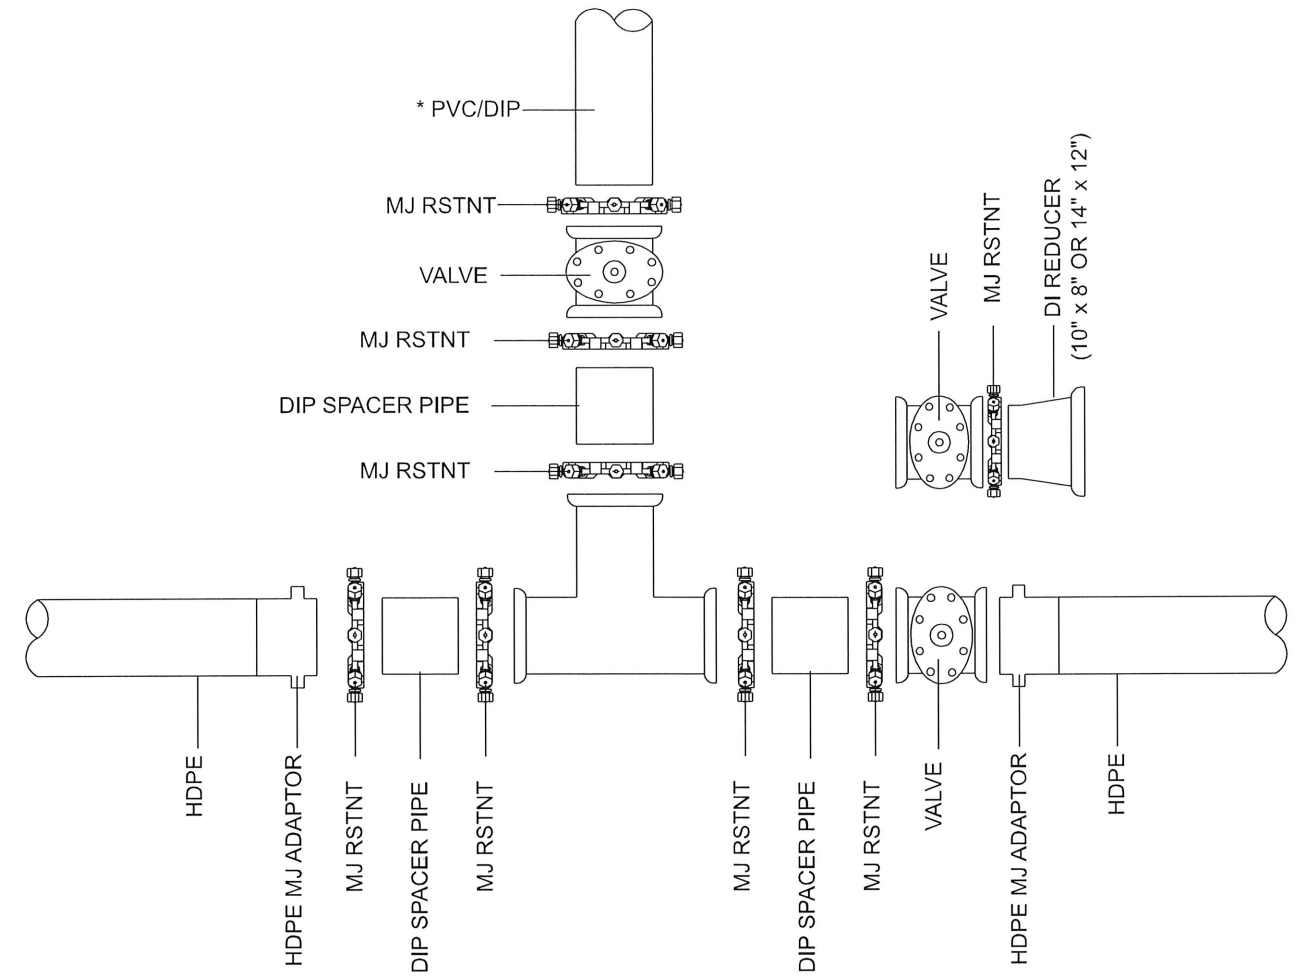


DI TEE (HDPE MAIN / HDPE BRANCH)



DI TEE (HDPE MAIN / DIP OR PVC BRANCH)

NOTES:
 WHEN HDPE MAIN IS CONNECTED TO DI FITTING, USE HDPE MJ ADAPTER AND DI REDUCER AS NECESSARY TO MAKE CONNECTION.

TYPICAL CONFIGURATIONS:

WHEN HDPE BRANCH IS 8", USE 8" GATE VALVE. USE 8" x 6" DI REDUCER AND 6" GATE VALVE ONLY WHEN CONNECTING TO 6" DIP/PVC



WHEN HDPE BRANCH IS 10", USE 10" x 8" DI REDUCER AND 8" GATE VALVE.

WHEN HDPE BRANCH IS 12", USE 12" GATE VALVE.

WHEN HDPE BRANCH IS 14", USE 14" x 12" DI REDUCER AND 12" GATE VALVE.

* DESIGN ENGINEER TO PROVIDE RESTRAINED JOINT REQUIREMENTS.

REVISION	BY	DATE

 CITY ENGINEER	CITY OF TULSA, OKLAHOMA ENGINEERING SERVICES DEPARTMENT
	HDPE-DUCTILE IRON FITTING DETAILS 1 OF 2
 DESIGN MANAGER	DATE: MARCH 2022